



Trigger Repair

(for models 624/632/632C-GTS)

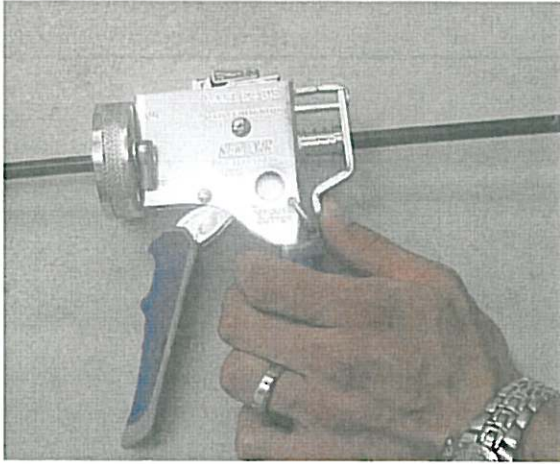


Step 1

First, make sure the leather cups and washers are removed from the push rod. Press thumb release and slide push rod out of the handle. Be careful as the springs, friction plate, and bushing may 'pop' out.

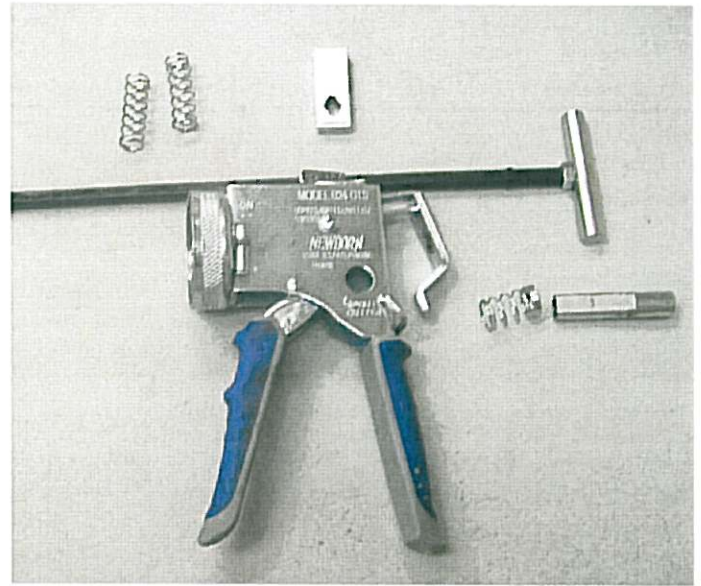


Step 2

Push rod, friction plate, front springs, recoil spring, and ETG bushing removed from handle.

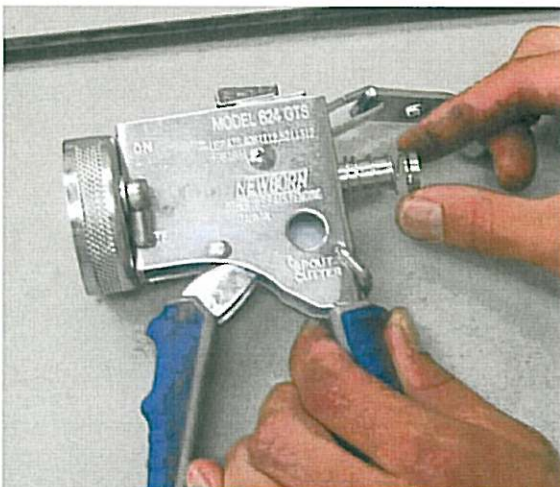

Step 3

Slide ETG bushing into back of handle, then slide recoil spring over ETG bushing.

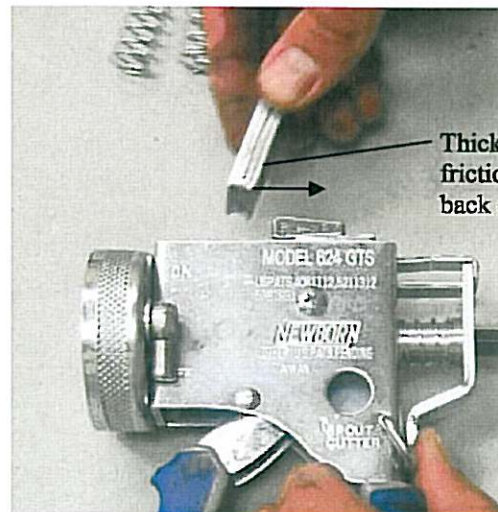

Step 4

Insert push rod through thumb release plate and ETG bushing, then drop friction plate in front of trigger. **NOTE that the thicker side of the friction plate must be facing the back of the gun.**