
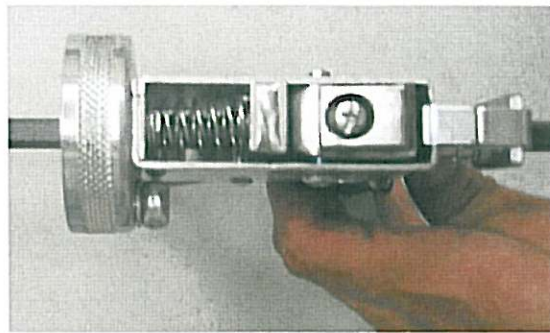


Step 5

Just when the push rod is starting to come through the friction plate (pic 1), put (1) of the front springs on the push rod (pic 2,3). Then, slide the push rod forward (pic 3).

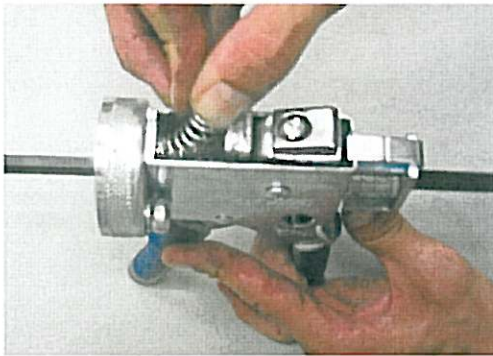

Step 6

Place the remaining front spring over the bolt head on the front of the handle (pic 1b), then slide it in place against the friction plate (pic 2b).